


CleanSticks SC/ST/FC & LC

These CleanSticks are designed with two models, one for cleaning fiber optic SC, ST and FC connectors with 2.5mm diameter and one for cleaning fiber optic LC connectors with 1.25mm diameter. The CleanSticks cleaning sticks are very practical and come in a 100 pieces box that is enough for 100 cleans.

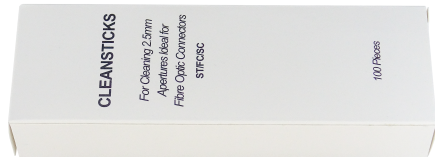

CleanSticks SC/ST/FC 2.5mm


Features

- Easy to use and efficient. Delivers a consistently high level of cleaning performance
- Easy to clean ferrule end-faces inside the plug-in fiber optic connectors and various adapters
- Lightweight and safe to use. Compact and disposable
- Suitable for cleaning inside adapters for dust control



CleanSticks LC 1.25mm

Recommended Cleaning Procedure for ACT Cleaning Sticks

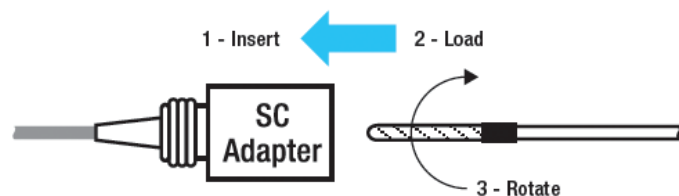

Procedure:

1. **Insert:** Ensure that stick is held straight when inserting into sleeve.
2. **Load:** Apply sufficient pressure (approximately 600-700 g) to ensure ferrule is a little depressed in sleeve.
3. **Rotate:** Rotate stick clockwise 4-5 times while ensuring direct contact with ferrule end-face is maintained.

Notes:

1. Number of possible wipes:
 - Maintenance (repair): approximately 1 use
 - Equipment construction: 4 uses (max.)